



# Masai Land Rover Defender Steering Guard Fitting Instructions



Thank you for purchasing our Masai Steering Guard for the Land Rover Defender. We recommend the following procedure for fitting the steering guard to your Defender. Please read these instructions carefully.

If you do not feel confident to fit the guard yourself, we also provide a fitting service - just call for a quote.

## 1. What's in the Masai Kit

### **Masai Steering Guard kit includes:**


- Right Hand and Left Hand Side Brackets as shown on the below photograph.



- Bolts, nuts and washers



- Shackles (optional extra)

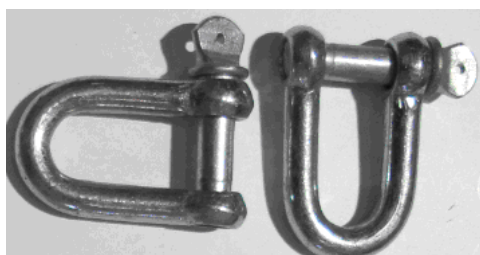

2. You need to remove the nuts (shown on the photograph below) from your vehicle in order to attach the left hand side bracket to the chassis. Some vehicles may not have these bolts. In this case you will need to use the long bolts provided in the kit. You may find it difficult to undo these nuts as they may be very stiff due to corrosion. If this is the case, heat them for couple of minutes with a lighter before you attempt to use your spanner or sockets. Failing that, use a suitable penetrating oil designed for such a purpose.



3. Repeat the above process for the left hand side bracket as shown below.



4. Adjust the right and left hand side bracket distance in between to meet the assembly holes on the main plate. Use the short bolts and nuts to fit the guard plate to the side brackets.



The installation is now completed.

Unit 5, Eastern Park, Eastern Avenue, Lichfield,  
Staffordshire, WS13 7SY. United Kingdom.

Tel: +44(0)1543-254507 Fax: +44(0)1543-418665

Email: [info@masai.co](mailto:info@masai.co)

[www.masai.co](http://www.masai.co)