


## Landrover Defender Stainless Steel Sports Fender & Side Grille Set

### Kit Contents:

2 off Upper Fender Grille  
1 off Side Grille

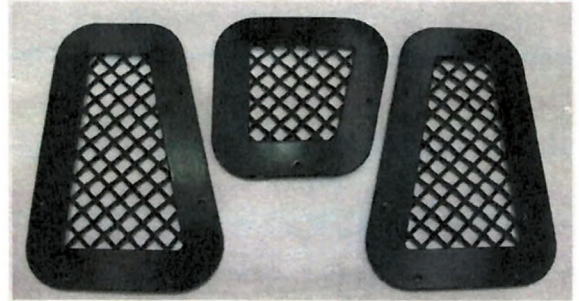

### Mesh Grille Kit Fitting Instructions

1. Firstly remove the existing moulding.
2. Locate the grille into the aperture so the grille sits in the recess and then reattach the existing screws (Fig 1 & 2).
3. Your grilles are now complete.

