
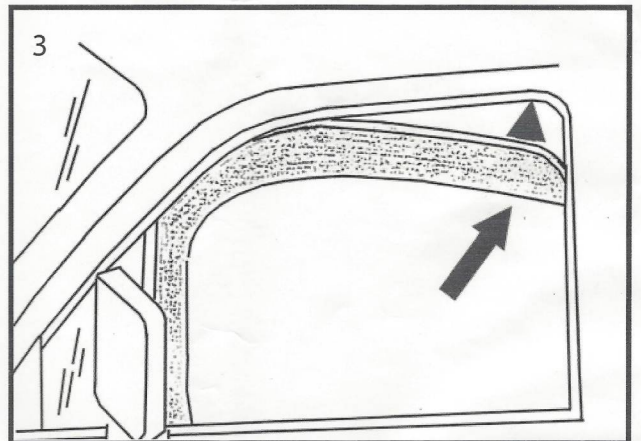
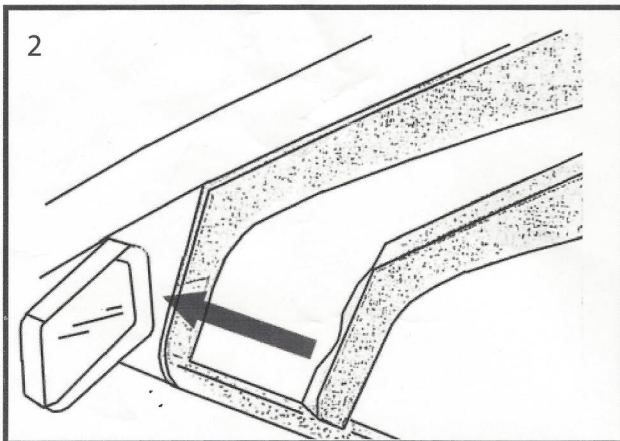
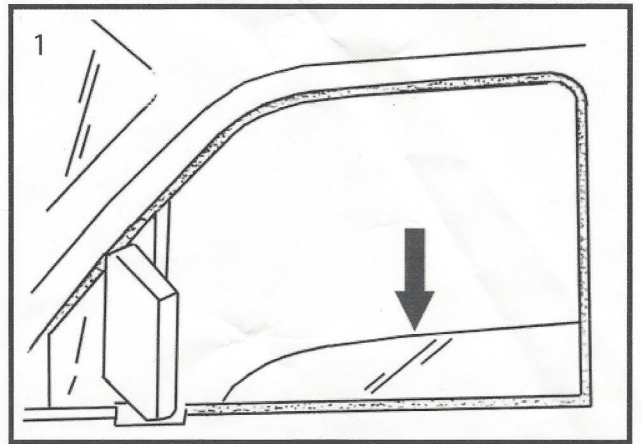


Einbauanleitung  
 Installation instructions  
 Instructions de montage


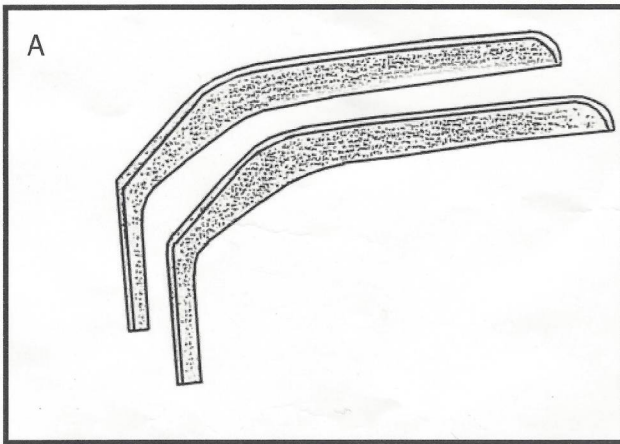


**Part No 3407**








**Please do not remove the clear protective tape from the end of the deflector as it will protect the door rubber and stop the deflector from moving**

- D** Einbauanleitung
- GB** Installation instructions
- F** Consignes de montage
- E** Instrucciones de montaje
- RUS** Инструкция по монтажу и установке



1 x Links / Left

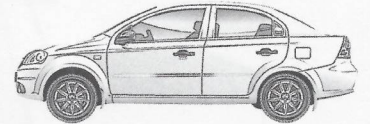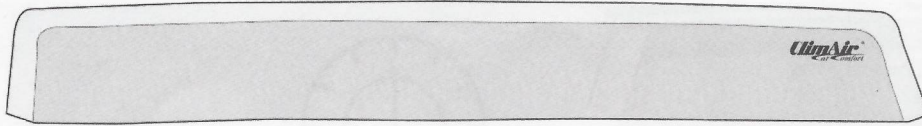

1 x Rechts / Right

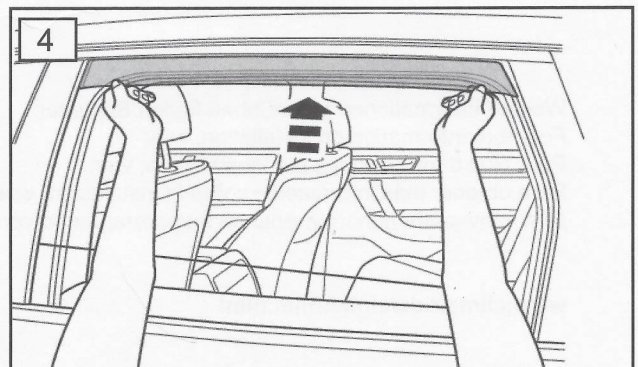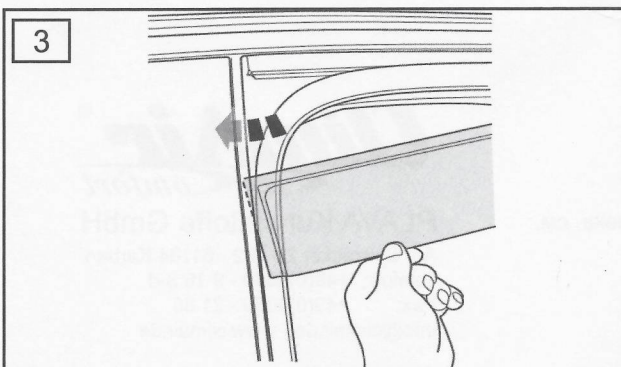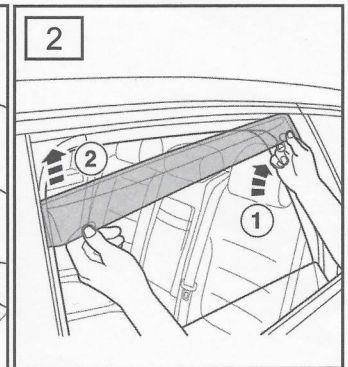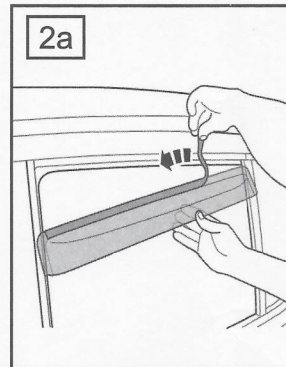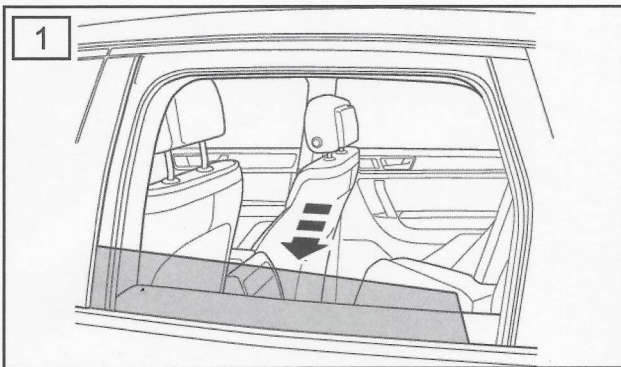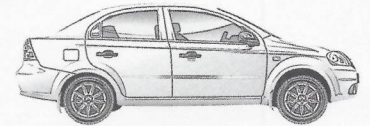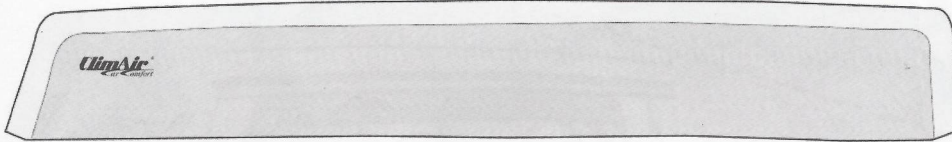



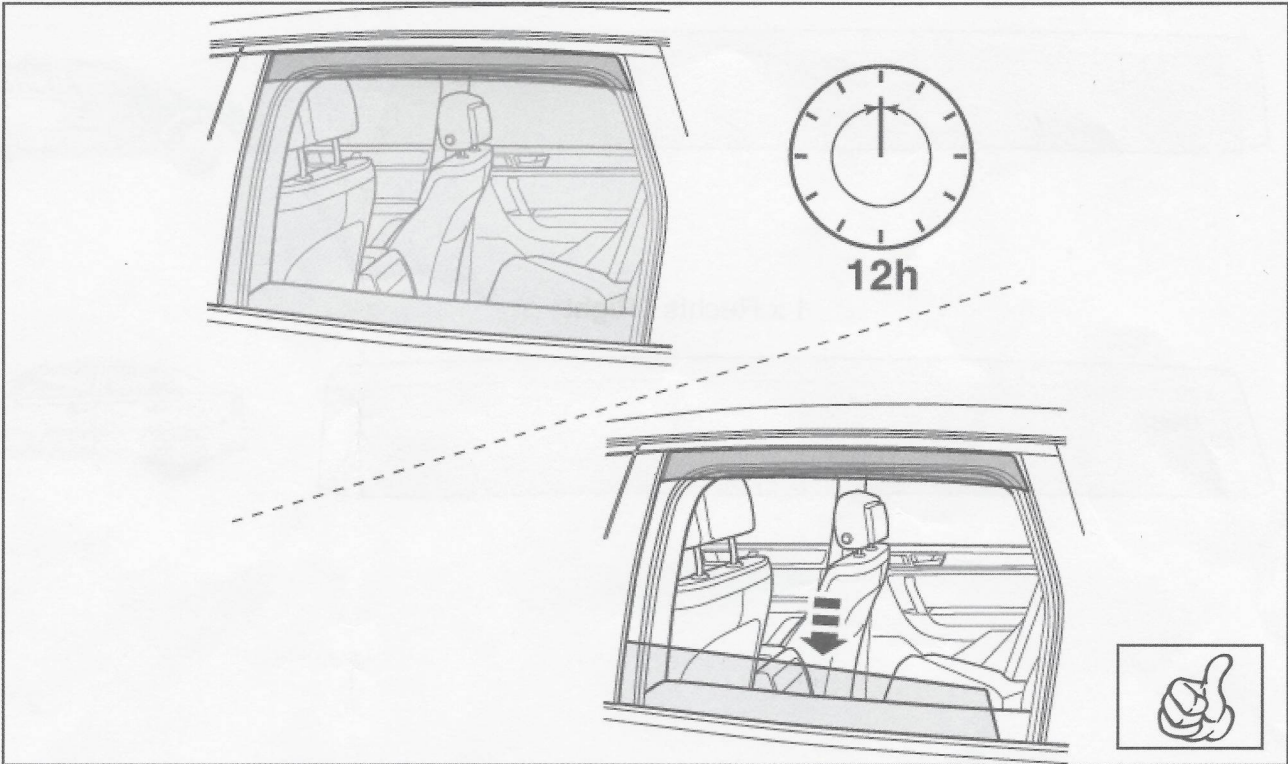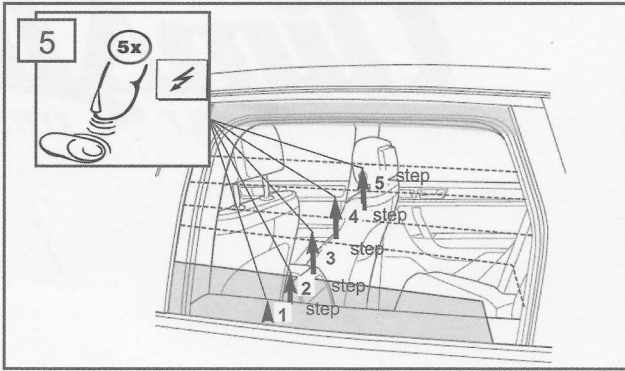

Weitere Informationen zum Einbau finden Sie unter:  
 For more information on installation, see:  
 Pour plus d'informations sur l'installation, voir:  
 Para obtener más información sobre la instalación, vea:  
 Для получения дополнительной информации по установке, см.:

[www.climair.de/einbaufilm.html](http://www.climair.de/einbaufilm.html)

**ClimAir**<sup>®</sup>  
*car comfort*

PLAVA Kunststoffe GmbH  
 Am Spitzacker 20 - 22 - 61184 Karben  
 Telefon: +49(0)6039 - 9 16 3-0  
 Fax: +49(0)6039 - 21 85  
 info@climair.de - www.climair.de